# **RADIO KEY® RK-WL Installation Instructions**

#### **INSTALLATION STEPS:**

- 1. Drill holes as needed per installation diagram shown to the right.
- 2. Feed cable through 3/4" hole in mounting plate.
- 3. Attach the mounting plate to the mounting surface with the appropriate fasteners.
- 4. If the reader will be mounted on a metallic surface as large as, or larger than the reader housing, install a one-inch non-metallic spacer behind the reader mounting plate.
- 5. Connect RK-WL cable per wiring diagram shown on the reverse side.
- 6. Attach the housing to the mounting plate by inserting the three tabs inside the top of the housing into the three slots at the top of the mounting plate.
- 7. Secure by installing supplied screws into the holes at the bottom of the reader.


### NOTES ON READER LOCATION


- 1. RK-WL readers can interfere with one another. If you have two or more RK-WL units, locate them at least 8 feet apart.
- 2. Extended range readers will generally perform better in outdoor applications and less well for interior applications.
- 3. Read distance can be adversely effected by nearby metal, electronic equipment and power lines. Radio transmitters (i.e. CB radio, wireless intercoms) can also deteriorate performance.
- 4. Before mounting the reader we recommend connecting it to a 12VDC battery or power supply and trying it in different orientations. Sometimes a slight change of angle can improve range considerably.


## SPECIFICATIONS

OUTPUTS & INPUTS			
Wiegand Output	Data 1 and Data 0 Output Sink Current: 100mA; Output Source Current: 5mA		
LED/Buzzer Control	LED/Buzzer Control		
	LED Buzzer	Bicolor (Red or Green) Short chirp upon presentation of any compatible Secura Key transponder, also controlled by input.	
Cable Required	Maximum Distance - 500 ft 5 to 7 conductor . 20 gauge shielded cable (depends on LED and Buzzer control used)		
ENVIRONMENT	Access Control Unit and Card/Key Tag Ambient Temperature -40° to +70°C (-40° to +158°F) Humidity 0 to 100%, non-condensing		


### **OVER FOR ADDITIONAL INFORMATION**

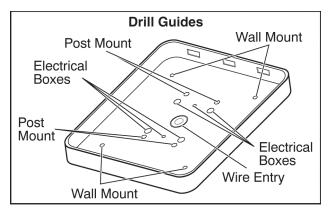

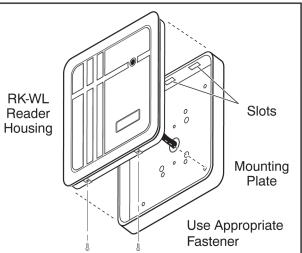

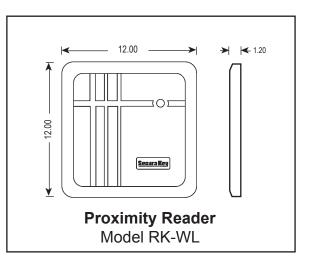



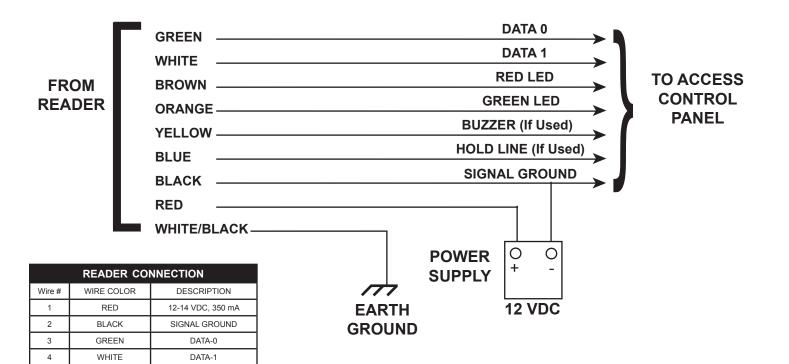

## **READER POWER SUPPLY NOTES:**

Connect the red and black wires from the reader to a 12VDC power supply. Do NOT attempt to power the reader directly from the access control panel.

#### INSTRUCTION TO THE USER FCC ID: NNHRKWL

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more or the following measures:

· Reorient or relocate the receiving antenna.

**RED LED INPUT\*\*** 

GREEN LED INPUT\*\*

**BUZZER INPUT\*\*** 

HOLD LINE\*\*

EARTH GROUND

NOT USED

NOT USED

NOT USED

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been certified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.





www.SecuraKeyStore.com (800) 878-7829 sales@securakeystore.com

5

6 7

8

9

10

11

12

BROWN

ORANGE

YELLOW

BLUE

WHITE/BLACK

GRAY

VIOLET

WHITE/BROWN

\*When used with SK-ACP, a separate power supply must be used. \*\* Connect to GROUND to activate.